
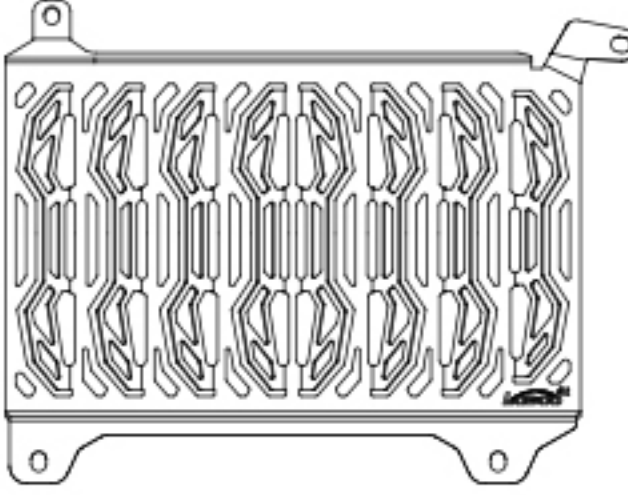
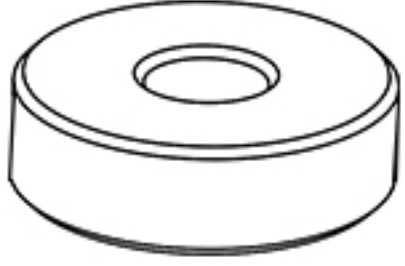
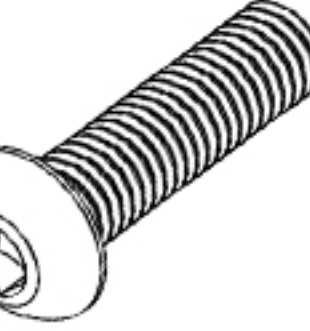
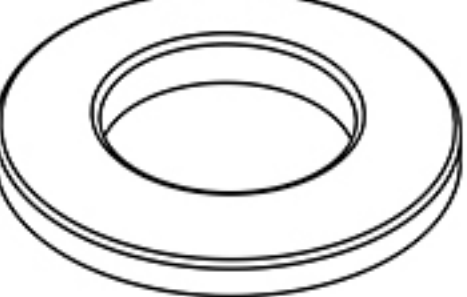
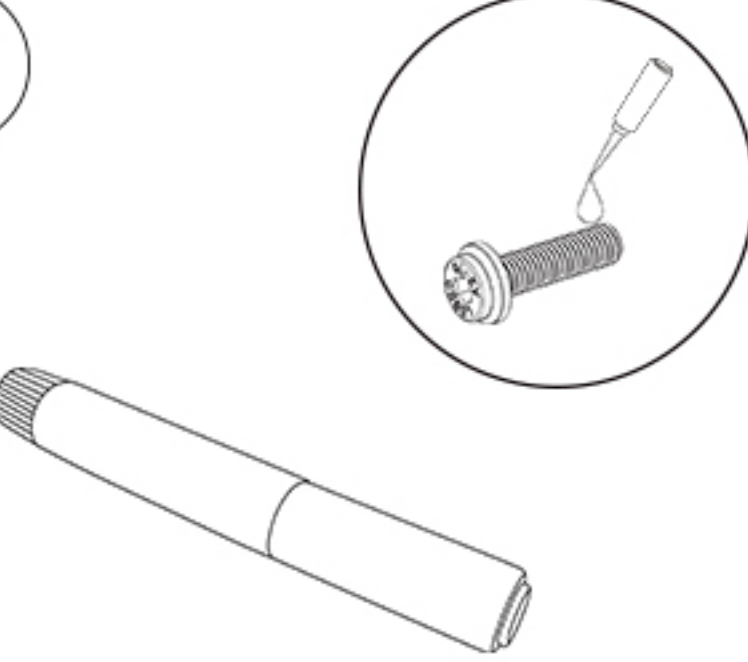
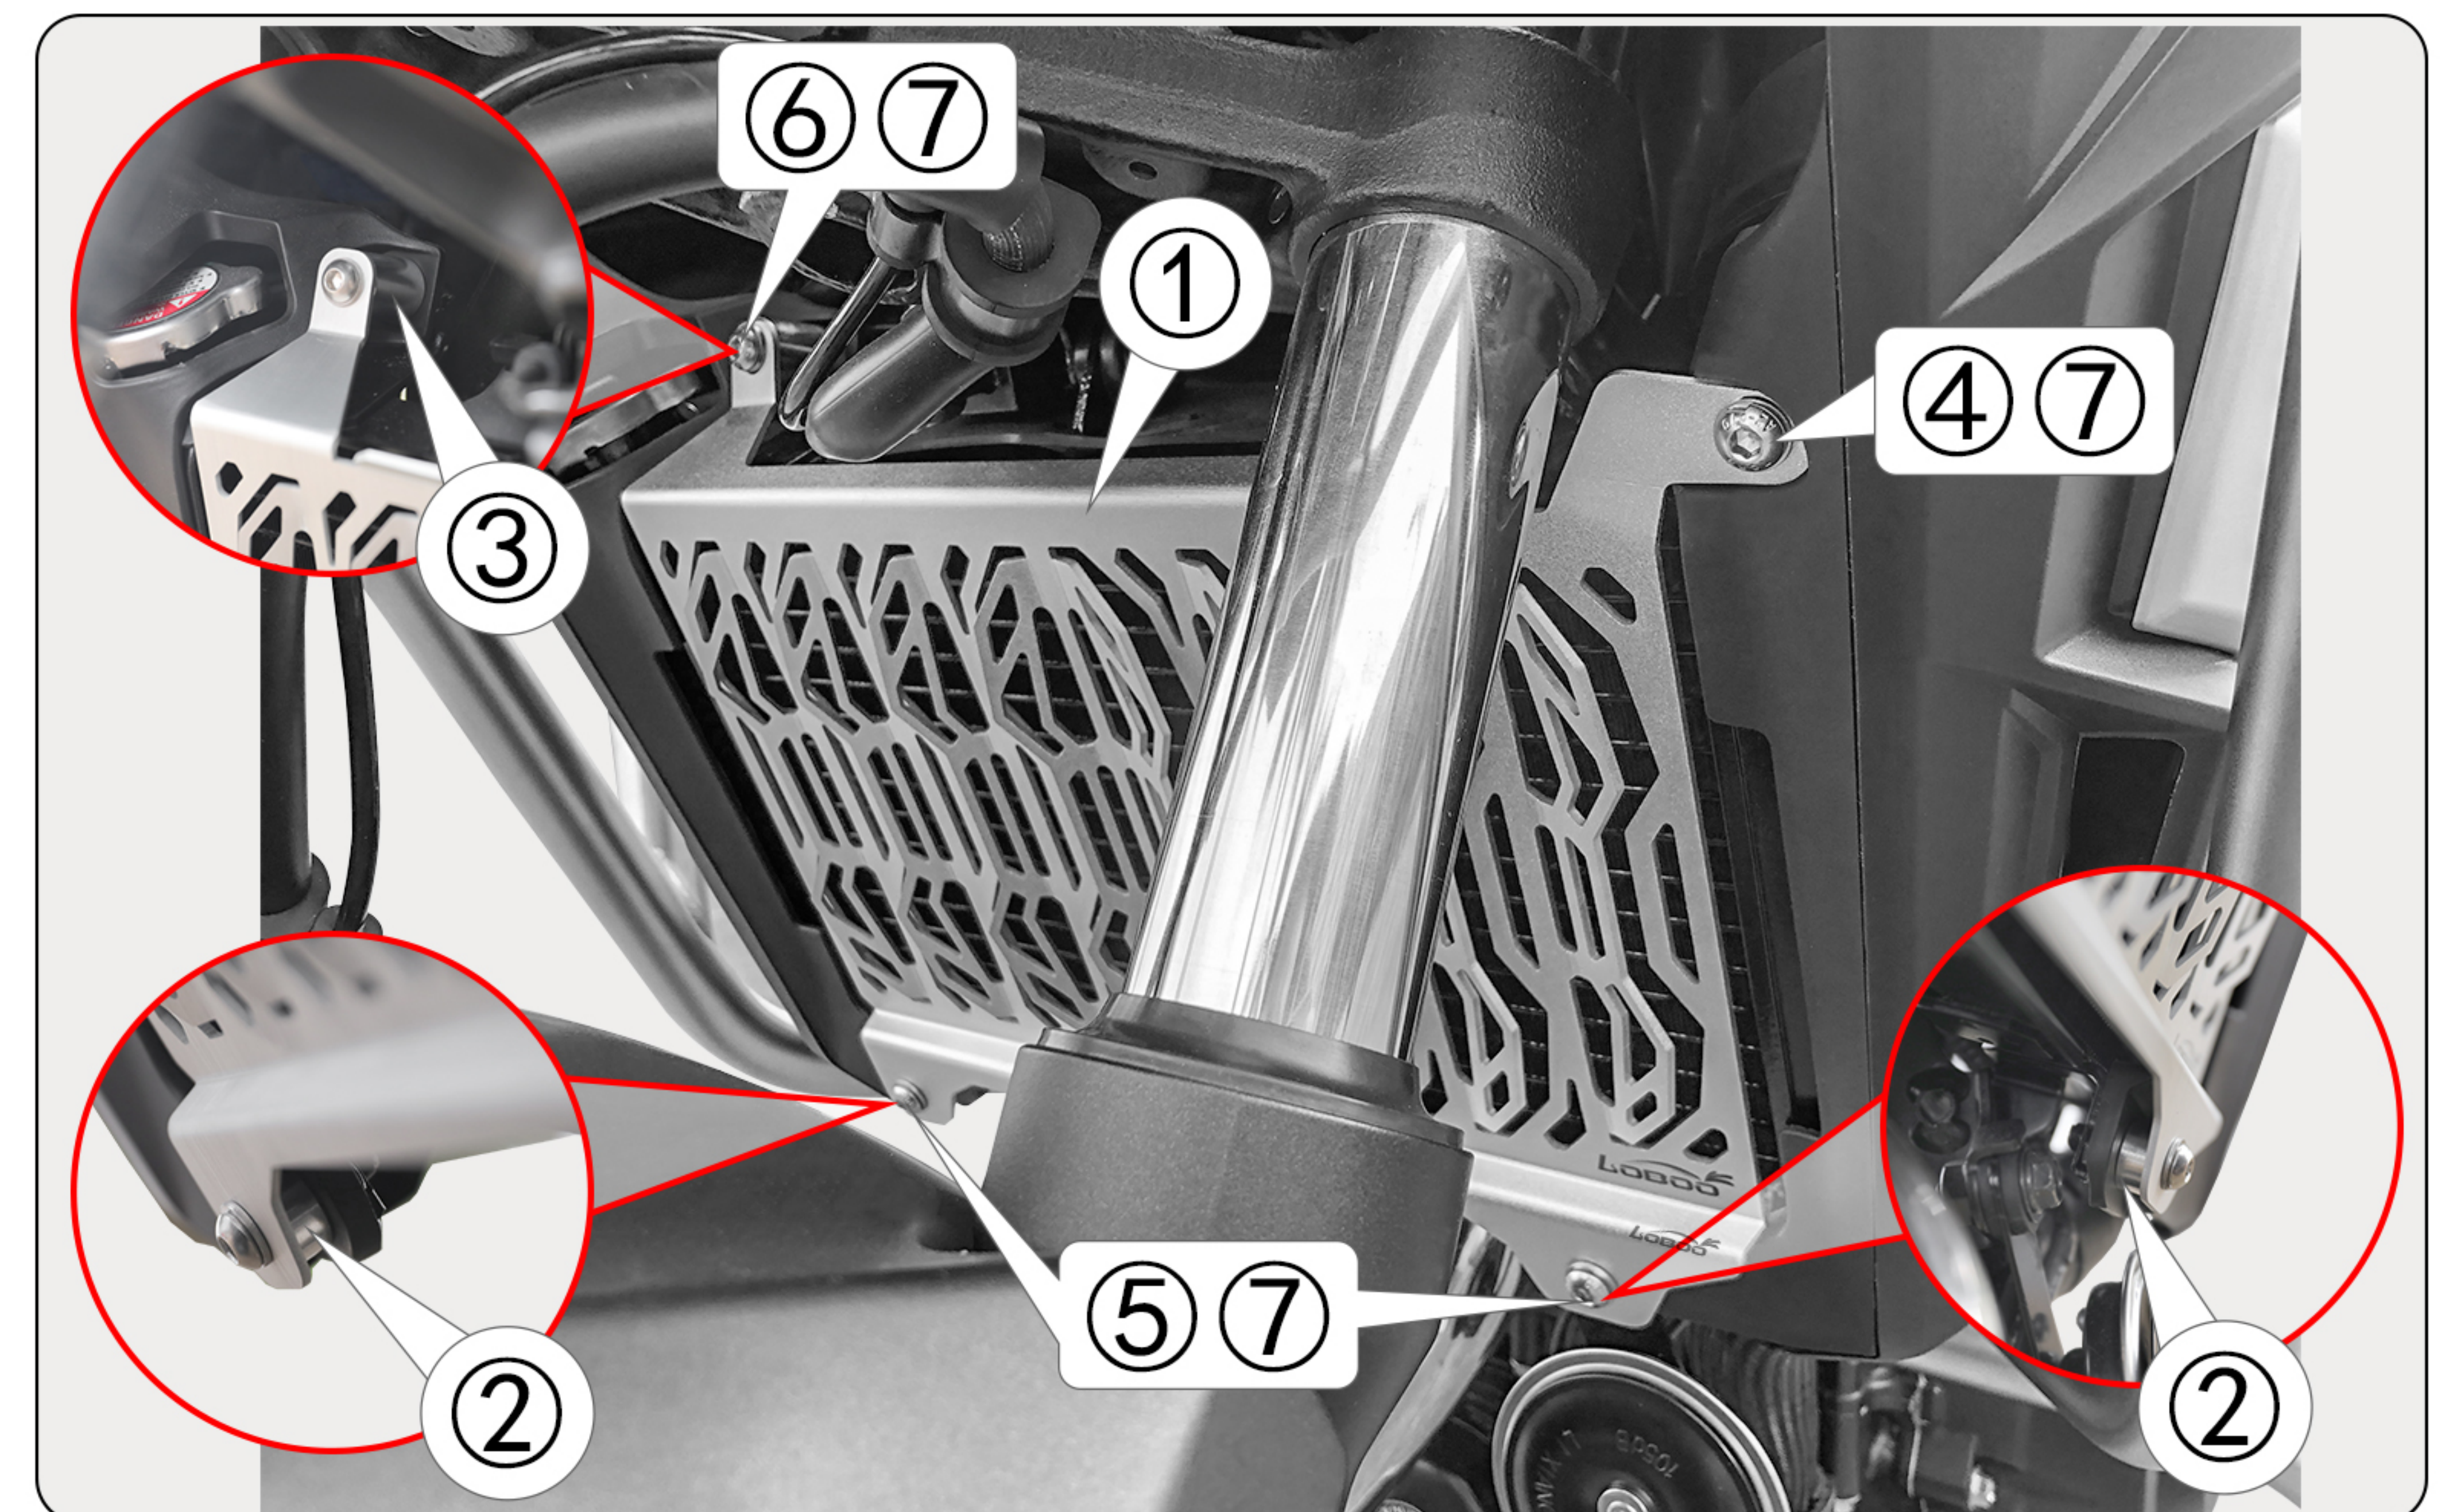


HONDA CB400X(2021-) Radiator Guard Installation Instructions

Model: CHW292

①  Quantity: 1 piece Radiator guard	②  Quantity: 2 pieces Outer diameter: 16mm Inner diameter: 6.5mm Height: 8mm	③  Quantity: 1 piece Outer diameter: 16mm Inner diameter: 6.5mm Height: 21mm	④  Quantity: 1 piece M6×18 Torque: 10N-m	⑤  Quantity: 2 pieces M6×25 Torque: 10N-m	⑥  Quantity: 1 piece M6×40 Torque: 10N-m	⑦  Quantity: 4 pieces M6 gaskets	⑧  Quantity: 1 piece Screw glue
---	--	---	--	---	--	--	---

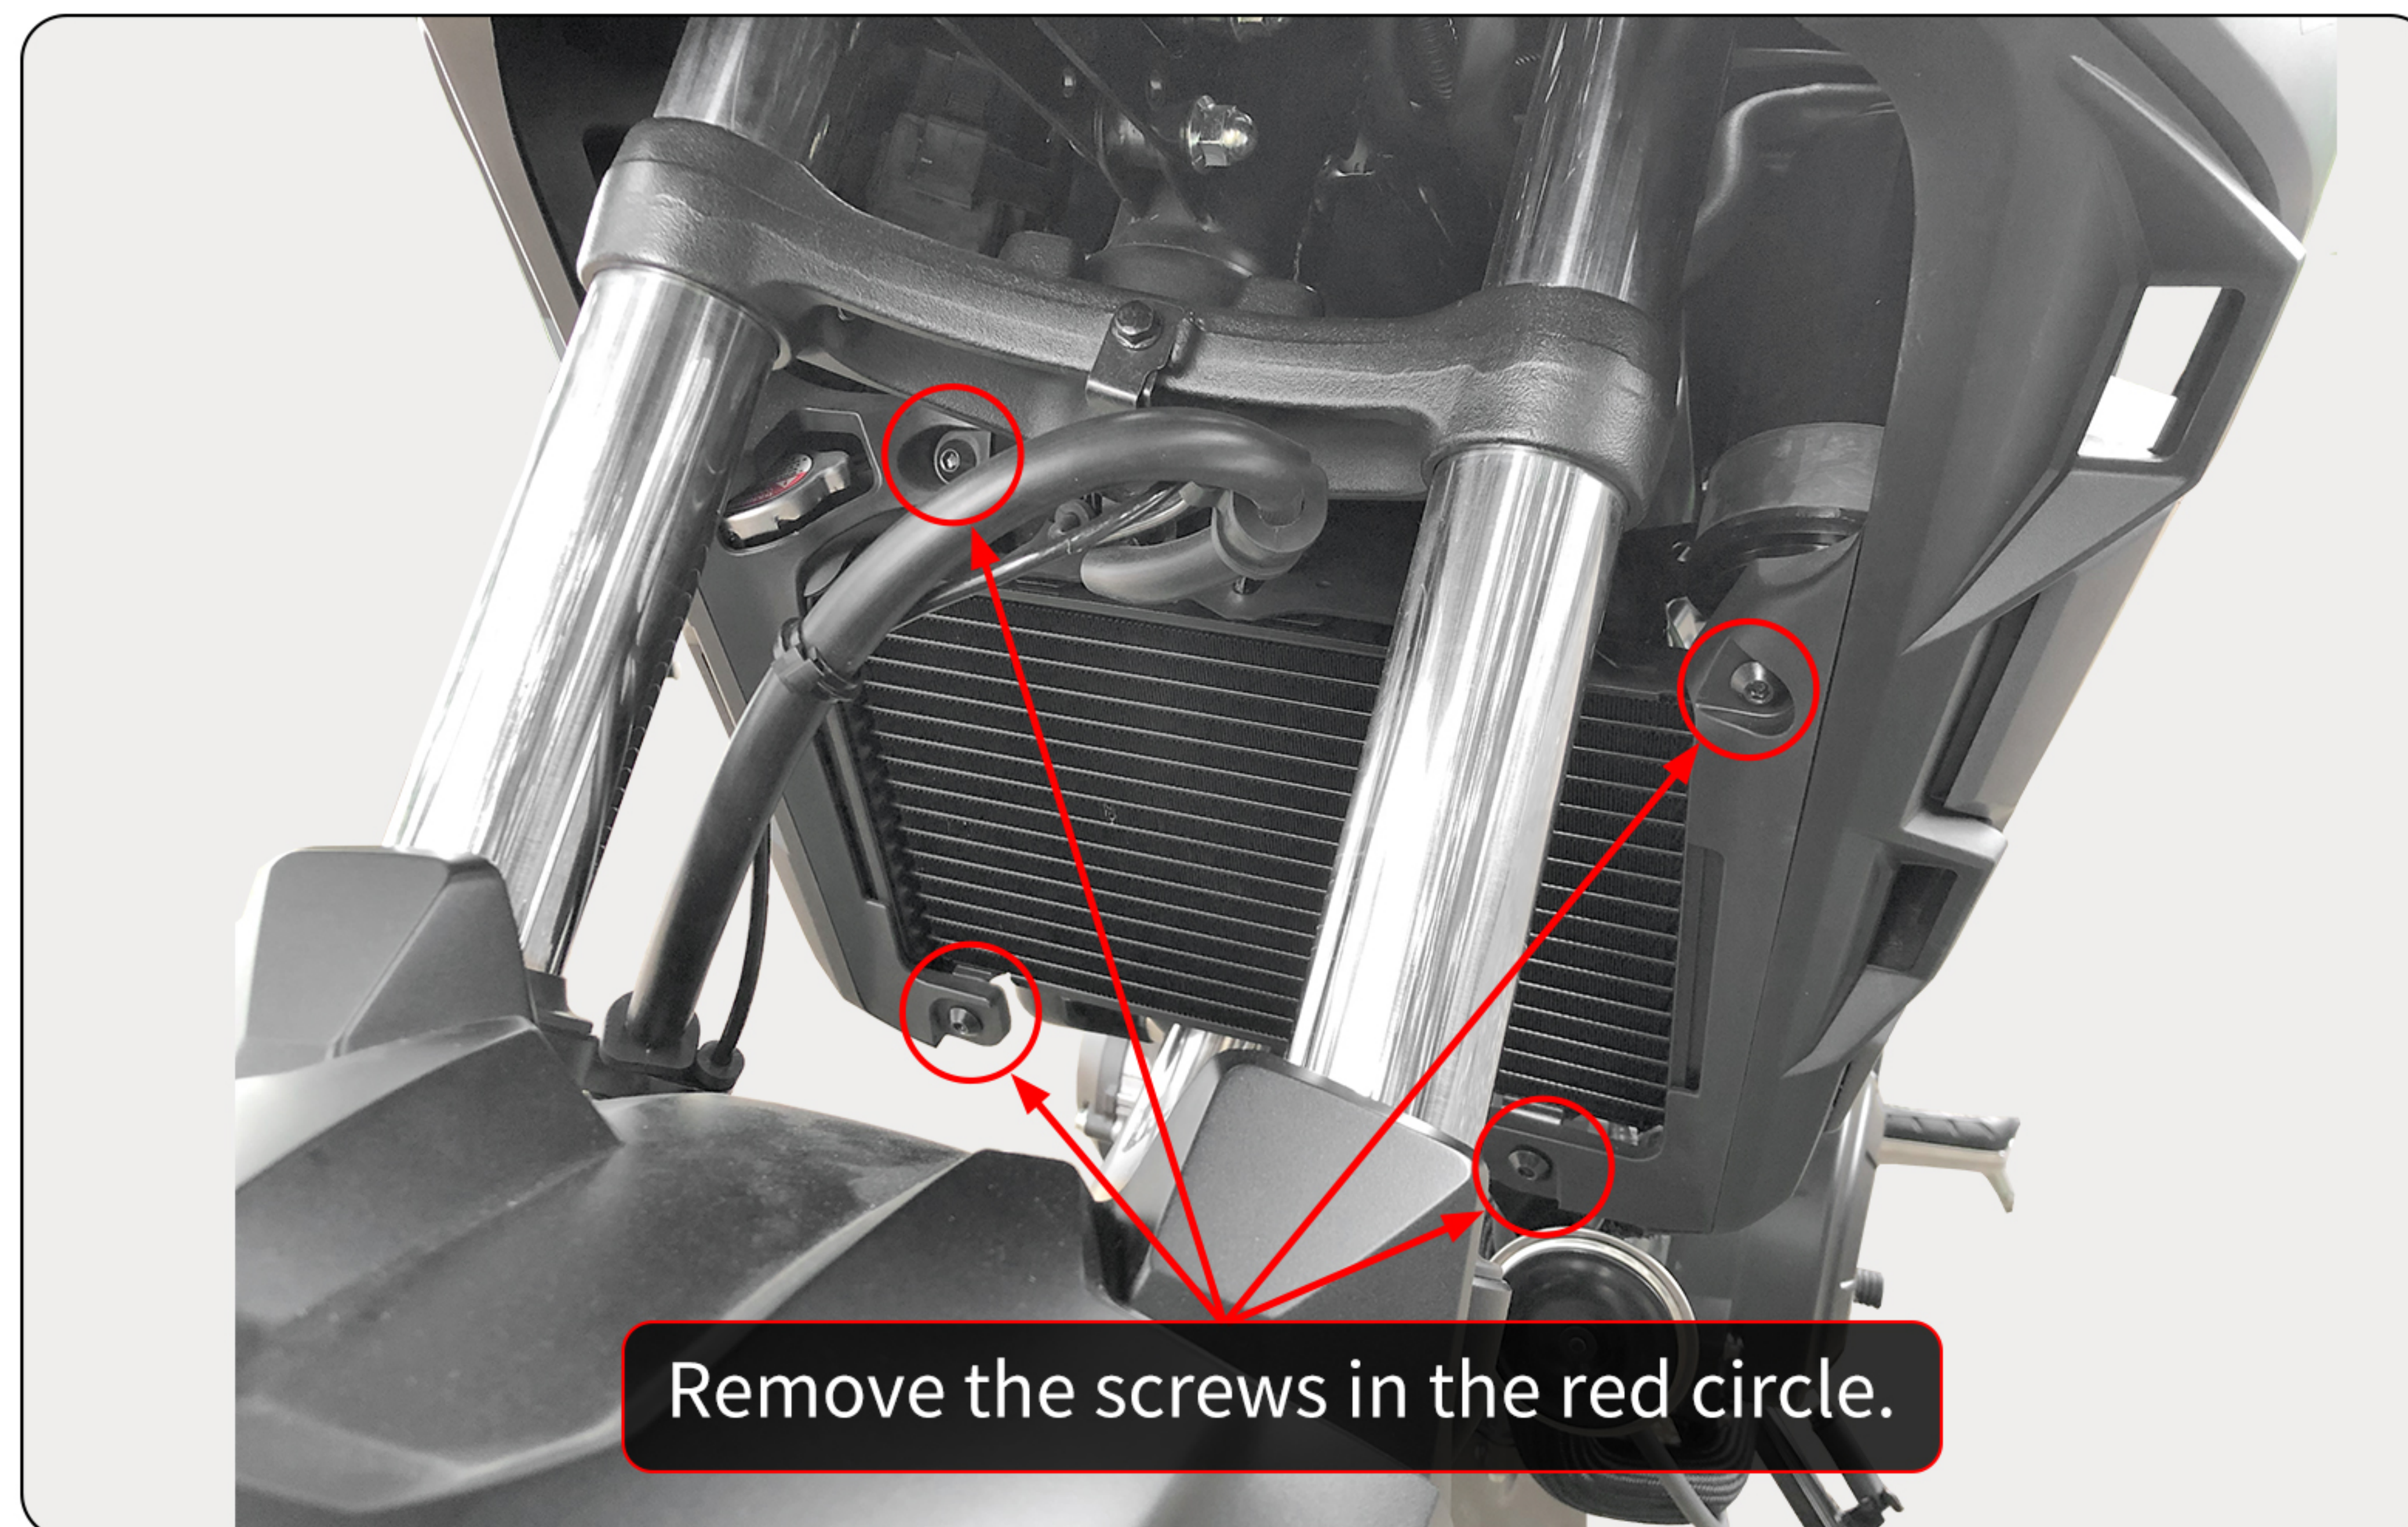

- Notes:**
1. Please read the installation instructions in detail before installation.
 2. Do not tighten the fixing screws when installing each part in turn, and then apply the appropriate amount of screw glue after each part is installed. Then tighten all the screws, and note the torque requirement of each screw (see the above accessories list).
 3. Regularly check the fixing screws of each component.



Scan the code to watch
the installation video